


KidWalk




New push-button adjustment for hip and chest supports!

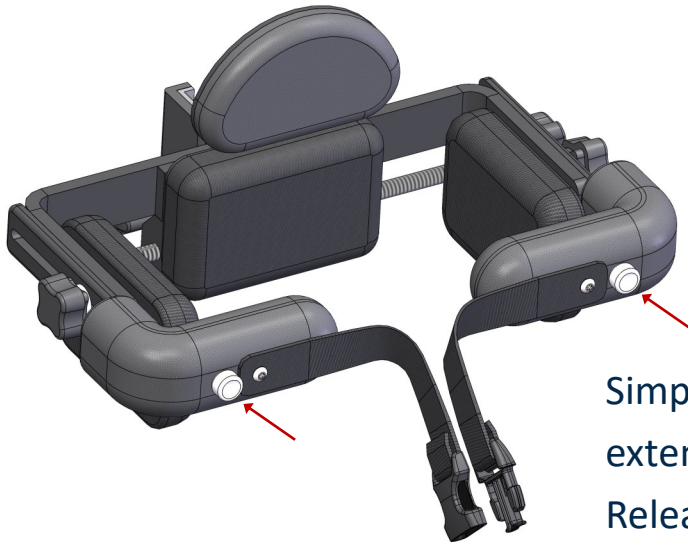

No more knobs on the floor!

Simply push the button and slide to extend or retract the pad.
Release to lock in place.

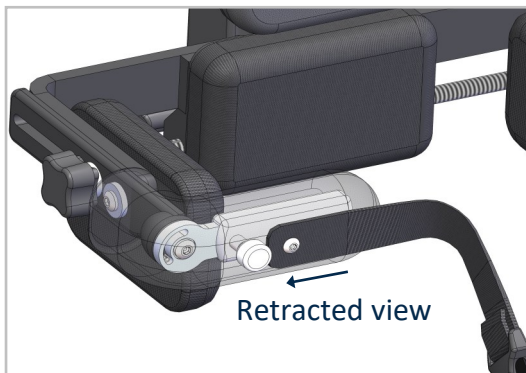

Above images show transparent pads for illustration purposes. Actual pads include fabric that allows for full extension. Pads can lock into 4 extension locations. Units shipped after 8/1/2025 are equipped with push-button pad adjustment.